
◆◆ Notes on Adjusting the Output level ◆◆

The Output Level Adjusting Knob can be rotated clockwise or counterclockwise freely ( 360 rotation ).

The knob's rotation and the actual output level are as shown below.

## Clockwise Rotation

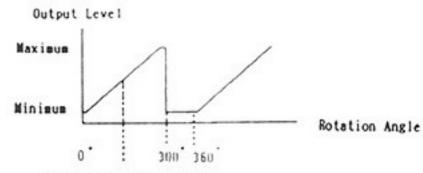



Factory Preset Position

At 0, the output level is lowest, and clockwise rotation increases the sensitivity. Around 330 , it is the highest, at between 300 to 360 (=0), the level is the lowest again.


Even at the lowest output level, you hear a slight sound.

The Output Level Adjusting Knob is set to the middle of the minimum and the maximum levels from the manufacturer.

・下まパファンコ盤公の中人直の小量当大量却ムーエリホの報筒出

・下までなコル最小のとまずは上の部分ではレベルは最小になります。
・スカス大路の上が第一のときでも音は消えません。

0度のとき、レベルは最小で、時計周りに回していくと感度が上り、約 300度付近

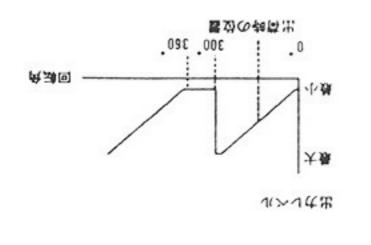



・下までカコでよの図却計開のパンマは出当内部回のムーエで生