


◆◆Notes on Adjusting the Output level ◆◆

The Output Level Adjusting Knob can be rotated clockwise or counterclockwise freely (360 rotation).

The knob's rotation and the actual output level are as shown below.

Clockwise Rotation

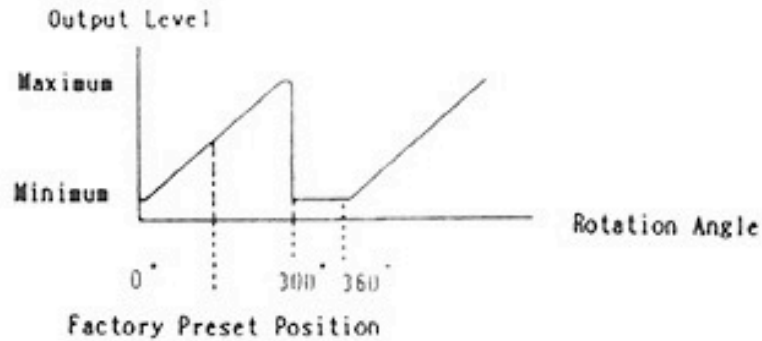

At 0, the output level is lowest, and clockwise rotation increases the sensitivity. Around 330, it is the highest, at between 300 to 360 (=0), the level is the lowest again.

Even at the lowest output level, you hear a slight sound.


The Output Level Adjusting Knob is set to the middle of the minimum and the maximum levels from the manufacturer.

出荷時のボリュームは最大と最小の真ん中の位置になっています。

レベルが最小のときでも音は消えません。

最大になります。300度以上の部分ではレベルは最小になります。

0度るとき、レベルは最小で、時計回りに回していくと感度が上り、約300度付近

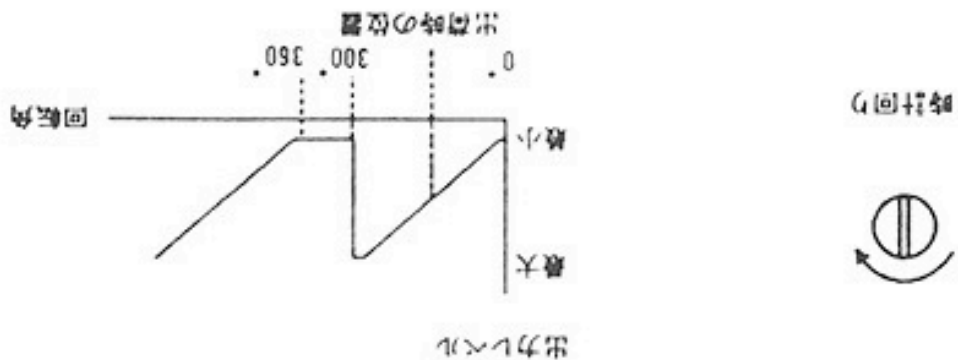

ボリュームの回転角と出力レベルの関係は図のようになります。

出力調整用ボリュームは左右方向に360度回転します。